



Instructions for Installation of Gloves In A Bottle Window Displays

- 10** With the squeegee push out all air bubbles and water drops from the center of the panel out to the edges.

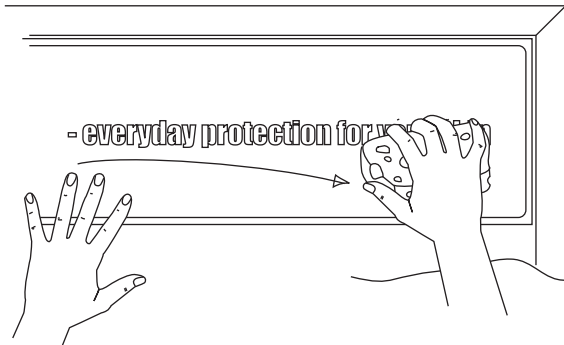

- 11** While the window is still wet with the soapy water mist, it will still be possible to do minor repositioning of the panel and graphics to get them into the exact right position.

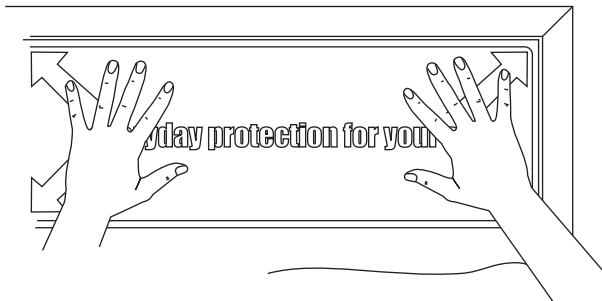


- 12** Once **horizontal panel** is free of all air bubbles and water drops you can begin this same process for the **vertical panel** (One drop is enough). **First be sure** to reclean the window surface of any water that runs down from the installation of the horizontal panel.


- 13** Repeat this same process for the bottle and drops.

- 14** Allow to dry for **6 hours** before exposing any panel graphic to any pressure or motion that could move it from its correct position.

Clean windows as normal, whenever they need to be cleaned.

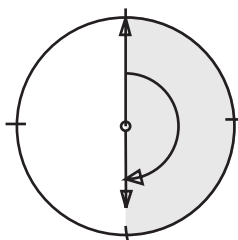

*wait for
6 hours*

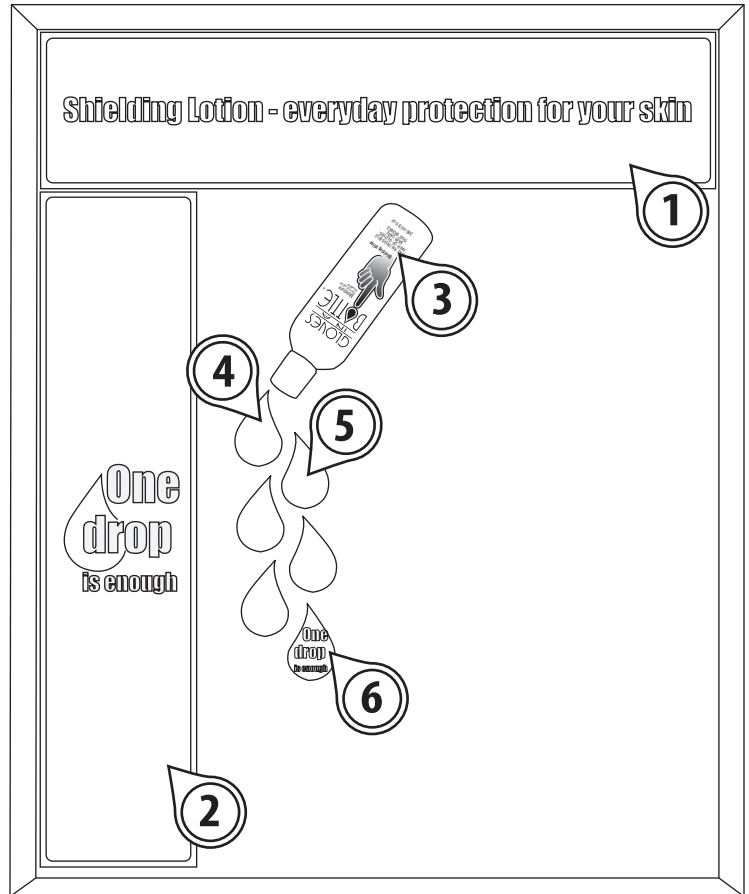

- 1** Horizontal Panel
- 2** Vertical Panel
- 3** Bottle
- 4** Right Drop
- 5** Left Drop
- 6** Printed Drop